

PUMP DRIVE COUPLING



DIMENSION
COUPLING 2A
COUPLING 2AS
COUPLING 4A
COUPLING 4AS
COUPLING 8A
COUPLING 8AS
COUPLING 16A
COUPLING 16AS
COUPLING 22A
COUPLING 22AS
COUPLING 25A
COUPLING 25AS
COUPLING 28A

DIMENSION
COUPLING 28AS
COUPLING 30A
COUPLING 30AS
COUPLING 50A
COUPLING 50AC (14 KEE)
COUPLING 50AM (16KEE)
COUPLING 50AS
COUPLING 50ASM (22 KEE)
COUPLING 90A
COUPLING 90AS
COUPLING 140A
COUPLING 140AS

PUMP DRIVE COUPLING



DIMENSION
COUPLING 30H CP
COUPLING 30H PVC
COUPLING 35H CP
COUPLING 35H PVC
COUPLING 40H CP
COUPLING 40H PVC
COUPLING 45H CP
COUPLING 45H PVC
COUPLING 50H CP
COUPLING 50H PVC
COUPLING 110H CP
COUPLING 110H PVC
COUPLING 140H CP
COUPLING 140H PVC
COUPLING 160H CP
COUPLING 160H PVC